


## INSTALLATION INSTRUCTIONS

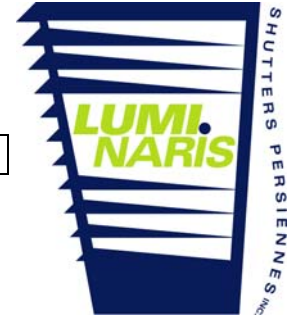

### Shutter with INSIDE MOUNT Frame (Z or L frame)

- Included in shipment: Inside mount frame profiles (with half of hinge pre-mounted) including 4 traction corner, shutter panels with other half of hinge mounted, hinge pins, plugs for covering holes in frame, and shims.
- Put frame together by snapping in traction corners. Turn the screw in each traction corner COUNTERCLOCKWISE to tighten the corners. Please turn a maximum of 4 times only.
- Place the frame in the window. Square the frame – use shimming if necessary. Square the frame horizontally and vertically.
- Fasten the frame to the sill using pre-drilled slots and holes. Suggested screw: #8 pan head, 1¼" long.
- Vertical members must feel very solid. If they are not, add additional screws.
- Place the panels using the pre-mounted hinges and the hinge pins supplied.
- If the frame was properly squared, and solidly fastened, panels will operate freely.
- Now fix horizontal members of the frame. Drill 3/8" holes through the inner face of the frame only. The holes should be centered on the extrusion line found on the frame profile. Shim where necessary – in an attempt to keep the light line equal throughout.
- Cover all holes in the frame with plugs supplied.

### Shutter with OUTSIDE MOUNT Frame (Casing/Decorative frame or L frame)

- Included in shipment: Frame profiles (with half of hinge pre-mounted) including 4 traction corners, shutter panels with other half of hinge mounted, hinge pins, plugs for covering holes in frame, and shims.
- Put frame together by snapping in traction corners. Turn the screw in each traction corner COUNTERCLOCKWISE to tighten the corners. Please turn a maximum of 4 times only.
- Place the assembled frame around the opening, fastening the top horizontal member at either end only and the vertical members at the top only. Do so by placing screws through the pre-drilled screw ports. Suggested screw: #8 pan head, 1¼" long. It is important that the horizontal member be straight (level).
- Place the panels using the pre-mounted hinges and the hinge pins supplied.
- Holding the two bottom corners of the frame, sway the frame slightly from side to side until the panels are aligned.
- Keeping the shutter in its aligned position; open all panels to fasten the middle and bottom of the vertical members of the frame. Finally, fasten the bottom member, as well as the middle of the top member of the frame, ensuring that the spring loaded end caps engage in the frame slot with the proper tension.
- Cover all holes in the frame with plugs supplied.

## INSTALLATION INSTRUCTIONS

### Shutter with NO Frame

- Included in shipment: Shutter panels with hinges mounted, hinge screws, hinge shims, magnets and magnet plates with required screws.
- Place the panels in the window opening and screw the hinges directly into the window frame using the hinge screws supplied.
- Use the hinge shims to align the panels.
- Attach the magnet plates to the backs of the styles (use pre-drilled holes) with the screws supplied.
- Attach the magnets to the window frame so that they align with the magnet plates and keep the shutter closed.

